

TOPFIELD



The User's Manual

Digital Terrestrial Receiver

Personal Video Recorder

Australian version

TF5000PVRt



Please read this User's Manual carefully.
The menu structure and specification can be changed without notice.



Dear customer,

Digital Broadcasting Australia (DBA) congratulates you on your decision to purchase a digital receiver set-top box.

Digital Broadcasting Australia is made up of the free-to-air television stations, consumer electronic suppliers/manufacturers and retailers. Together, we want to ensure the smoothest possible transition to digital for viewers and consumers. You can find out more about DBA by visiting our website - www.dba.org.au.

As you are one of the first to experience the unique benefits of digital television in Australia, we are inviting you to join the **DBA Early Adopter Club**.

Membership of the **DBA Early Adopter Club** is completely free. Some of the benefits of membership include:

- Receiving regular updates about digital television in Australia
- On-line access to member-only international news on digital television developments

You can also provide vital feedback on the features of digital television you like and don't like in occasional on-line surveys - so you can help shape digital television in the future.

To register as a member of the **DBA Early Adopter Club**, please enter your contact details on the registration web page at <http://www.dba.org.au/register.asp>. You will then receive a confirmation of your membership and a sign-on password.

We look forward to welcoming you to the **DBA Early Adopter Club**.

Tim O'Keefe
Digital Broadcasting Australia

TABLE OF CONTENTS

TABLE OF CONTENTS

INTRODUCTION	6
CONTENTS	6
FEATURES	7
FRONT/ REAR PANELS	8
REMOTE CONTROL UNIT(RCU)	10
INSTALLATION (Connection).....	13
Connection to TV, VCR and Hi-Fi.....	13
Connection to the Antenna	14
GETTING STARTED	15
MENU OPERATIONS.....	16
System Setting.....	17
Time Setting.....	17
Timer Setting.....	18
Parental Control	19
Language Setting.....	21
A/V Output Setting	22
OSD Transparency.....	23
Info Box Display Time.....	23
Info Box Position	23
Time Shifting	24
Organizing Favorites	24
Recording	25
Installation	26
Channel Search.....	27
Services Copy.....	28
Factory Setting	29
Format Hard Disk.....	29
Transfer Firmware.....	29
Information.....	30
IRD Status	30
Calendar	31
Common Interface	31
Game	32
ExBlock.....	32
Bomb Hexa	32
Pac Man	33
FUNCTION GUIDE	34
Channel List	34
Information Box	35

TABLE OF CONTENTS

EPG (Electronic Program Guide).....	36
Subtitle	36
Teletext.....	36
Sound Track	37
Multifeed	37
Time Shifting.....	37
Recording while Time Shifting	38
Recording, Checking and Editing the reserved delayed recording.....	39
Immediate Recording by RECORD button.....	39
Immediate Recording by Menu Selection	40
Delayed Recording.....	41
Recording by EPG.....	42
Playback a Recorded Service	43
Stop	44
Pausing.....	44
Slow Motion Playback	44
Fast Motion Playback.....	44
Fast Forwarding and Rewinding.....	45
Reverse Playback	45
Bookmark.....	45
Recording The Descrambled Live Service.....	46
Descrambling Recorded Services.....	46
Repeated Playback mode.....	47
Copying from Recorded Services.....	48
Cut Out/ Save Selected Region	49
Time Shifting while Recording	49
Zapping while Recording	49
Picture In Picture (PIP).....	50
Dual Recording.....	50
File List	51
Recorded Services List.....	51
MP3 File List	53
Program File List.....	53
Progress Icon.....	54
SOFTWARE UPGRADE AND PC INTERFACE.....	55
Software Upgrade.....	55
File download and upload via USB.....	55
MENU MAP.....	56
SPECIFICATIONS	58

WARNING

Please read the following recommended safety precautions carefully for your safety.

MAINS SUPPLY : 90-250V AC 50/60 Hz.

OVERLOADING : Do not overload wall outlets, extension cords or adapters as these can result in fire or electrical shock.

LIQUIDS : Keep liquids away from the PVR. The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus.

FLAME SOURCES : Do not place naked flame sources, such as lighted candles, on the PVR or near the PVR.

SMALL OBJECTS : Coins or other small objects must be kept away from the PVR as they can fall through the ventilation slots of the PVR and cause serious damage.

CLEANING : Disconnect the PVR from the wall socket before cleaning it. Use a dry cloth lightly dampened(no solvents) to clean the exterior of the PVR.

VENTILATION : Do not block the PVR's ventilation slots. Ensure that a free airflow is maintained around the PVR.

Never stand the PVR on soft furnishings or carpets. Do not use or store the PVR where it is exposed to direct sunlight or near a heater.

Never stack other electronic equipment on top of the PVR.

ATTACHMENTS : Do not use any attachments that are not recommended as these may cause hazards or damage the equipment.

CONNECTION TO THE AERIAL ANTENNA : Disconnect the PVR from the mains before connecting or disconnecting the cable from the antenna. Failure to do so can damage the antenna.

SERVICING : Do not attempt to service this product by yourself. Do not remove the cover. Refer all servicing to qualified service agents.

 
LIGHTNING : For protection we recommend that you connect the PVR via an external surge protection device. Disconnect the antenna cable from PVR during lightning storms.

EARTHING : The antenna cable **must be earthed**.

WARNING

LOCATION : Locate the PVR indoor place properly to prevent lightening, raining and direct sunlight. Do not allow the PVR to be exposed to hot, cold or humid conditions.

RESPONSIBILITY : Do not use the PVR and its contents for illegal purpose. We are not responsible for any kind of illegal use.
Do not use the PVR to backup important data. It can be deleted.
We are not responsible for any kind of problems caused by TAP application programs.

	CAUTION RISK ELECTRIC SHOCK Do NOT OPEN	
 This symbol indicates “dangerous voltage” inside the product that presents a risk of electric shock or personal injury.		 This symbol indicates important instructions accompanying the product.
CAUTION : TO REDUCE THE RISK OF FIRE OR ELECTRIC SHOCK, DO NOT EXPOSE THIS APPLIANCE TO RAIN OR MOISTURE.		

Warning

Please do not insert metal or alien substance into the slots for the Modules and Cards.
In doing so can cause damage to the PVR and reduce its life span.

INTRODUCTION

INTRODUCTION

Thank you for purchasing the Personal Video Recorder (PVR).

This PVR is fully compliant with the international DVB standard and thus transmits digital images, sounds, information guides and teletext directly to your TV through the terrestrial broadcasting.

Now you can comfortably see and receive digitally transmitted music, news, movie and sports terrestrial broadcasts in your office or at your home. The PVR records and plays back terrestrial broadcasts. You can enjoy interesting games embedded in PVR.

In the Channel Search section, both the automatic channel search method and the manual search mode are provided. You can save up to 2000 TV or Radio channels and work around with the Favorite, Lock, Delete, Move and Sort functions.

The Menu is very modern and supports multiple languages. All functions can be carried out using the remote control and some of the functions can also be carried out using the front panel. The PVR is easy to use and adaptable for future advances. Please be aware that new software may change the functions of the PVR.

If you have any difficulties concerning the operation of your PVR, please refer to the relevant section of this manual, including the 'Troubleshooting'. This Manual will provide you with useful information on using the PVR.

CONTENTS

Please ensure that the following items are included with the PVR.

- 1) Remote control unit
- 2) Batteries (size AAA)
- 3) User's Guide (this document)
- 4) Loop through cable (to connect Tuner 1 and Tuner 2)

INTRODUCTION

FEATURES

- Fully Compliant with DVB.
- 2 Common Interfaces for CONAX, CRYPTOWORKS, IRDETO, NAGRAVISION, SECA & VIACCESS
- MPEG-2 Digital and fully DVB compliant
- 2 Tuners
- 2000 channels (TV or Radio) programmable
- Channel switching time less than 1 second
- Channel list editing
- Favorite channel list editing
- True-color On-screen Display (OSD)
- Full Picture In Graphic (PIG) function
- Electronic Program Guide (EPG) for on screen channel information
- Subtitle supported
- Teletext supported by VBI insertion and software emulation
- Parental lock facility by channel and program event
- Program and Channel information transfer from receiver to receiver
- Exciting games embedded
- S/PDIF for digital audio or Dolby AC-3 bitstream output
- Recording capacity : 44 hours for 4Mbps stream with 80GB HDD
- Powerful trick mode supported
- Playback of the selected region repeatedly
- Dual Decoding(PIP)
- Dual Recording and Playback simultaneously
- Time-shifting and Dual recording simultaneously
- USB 2.0 supported for fast PC interface
- MP3 (MPEG-1 Layer 3) decoding

FRONT/ REAR PANELS

FRONT/ REAR PANELS

1) FRONT PANEL



-POWER

The power button of PVR (ON / Stand by)

-LED

TV/STB

REMOTE

STAND BY

-DISPLAY

During the STANDBY mode, the current time is displayed.

When the power is ON, the current status is displayed(TV/Radio/Menu).

-CHANNEL

Change the channels

-VOLUME

Change audio volume level

-MENU


Display the Menu on screen.

-OK

Display channel List on screen.

Select an item in the menu.

2) REAR PANEL

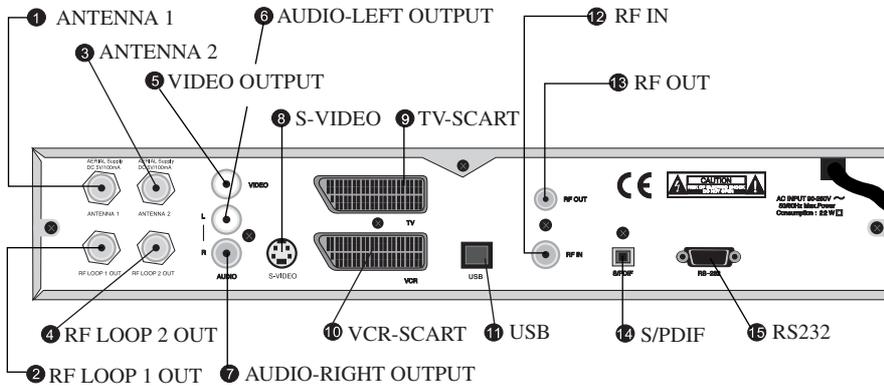


FRONT/ REAR PANELS

- 1 Antenna 1 IN
 - Connect the terrestrial antenna cable
- 2 RF Loopout 1
 - Use it to connect to another STB or Antenna 2 IN
- 3 Antenna 2 IN
 - Connect the terrestrial antenna cable or RF Loopout 1
- 4 RF Loopout 2
 - Use it to connect to another STB or RF IN of RF modulator
- 5 VIDEO OUTPUT
 - Video output. (YELLOW)
- 6 AUDIO-LEFT OUTPUT
 - Audio output. (WHITE)
- 7 AUDIO-RIGHT OUTPUT
 - Audio output. (RED)
- 8 S-VIDEO
 - S-Video output. Connect the S-Video input of your TV.
- 9 TV SCART
 - Connect the TV SCART
- 10 VCR SCART
 - Connect the VCR SCART
- 11 USB port
 - Connect USB port of PC
- 12 RF IN
 - Connect the TV antenna or RF Loopout 2
- 13 RF OUT
 - Connect the TV RF IN
- 14 S/PDIF
 - Optical output for Digital Audio
- 15 RS232
 - Upgrade the PVR Program & software

REMOTE CONTROL UNIT(RCU)

REMOTE CONTROL UNIT(RCU)

- 1 POWER Button ()
 - Switch the PVR between Operation and Standby mode.
- 2 MUTE Button ()
 - Enable / Disable the Audio.
- 3 UHF Button ()
 - Display and alter the UHF setting in menu.
- 4 TV/STB Button ()
 - Change the terrestrial TV and STB mode.
- 5 SLEEP Button ()
 - Display the sleep time. At the sleep time, the power is automatically turned OFF and the PVR goes to the STANDBY mode.
- 6 Numeric Buttons ( ~ )
 - Select the TV or Radio service channels and menu options.
- 7 RECALL Button ()
 - Select the previously viewed channel.
- 8 INFO Button ()
 - Display the program information box on the Screen and remove it.
 - Display the extended event information when the information box is displayed.
- 9 GUIDE Button ()
 - Display the EPG on screen when available.
 - Remove EPG when EPG is displayed.
- 10 TV/ Radio Button ()
 - Select the TV/Radio mode.

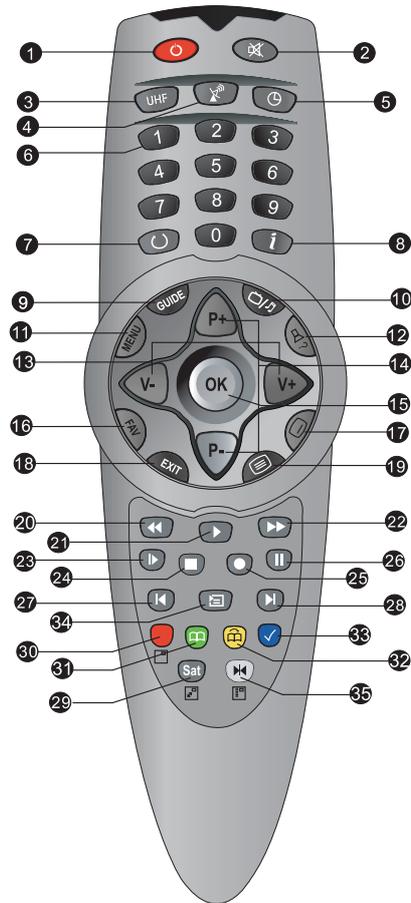

REMOTE CONTROL UNIT(RCU)

- 11 MENU Button ()
 - Display the Menu on screen or return to previous menu from submenu.
- 12 SOUND Button ()
 - Select Sound Track and LEFT / RIGHT / MONO / STEREO sound.
 - Select the multifeed channel if multifeed is available.
- 13 V+/V- Buttons ( )
 - Adjust the volume (Increase / Decrease).
 - Change the value of the selected item in Menu.
- 14 P+/P- Buttons ( )
 - Service up or down through the available services.
 - Move the selection bar in Menu.
- 15 OK Button ()
 - Display Channel List on screen.
 - Select an item in the menu.
- 16 FAV Button ()
 - Display the favorite channel list.
- 17 SUBTITLE Button ()
 - Activate the subtitle selection window. Select the subtitle language in the list.
- 18 EXIT Button ()
 - Return to the previous menu and the screen.
- 19 TELETEXT Button ()
 - Enable the teletext with software emulation.
- 20  Button
 - Fast rewind when the progress bar is displayed.
 - Start reverse playback.
 - Change the speed of reverse playback.
- 21  Button
 - Display the progress bar of time shifting or playback when no progress bar is displayed.
 - Start playback with normal speed.
 - Return to normal speed from trick mode.
- 22  Button
 - Start fast forward or fast motion playback.
 - Change the speed of forward playback.

REMOTE CONTROL UNIT(RCU)

- 23  Button
- Start slow motion playback.
 - Change the speed of slow motion playback.
- 24  Button
- Stop time shifting, playback or recording.
- 25  Button
- Start recording.
- 26  Button
- Pause the playback and live picture.
- 27  Button
- Move the position of Sub-picture at the PIP by counter clockwise.
- 28  Button
- Move the position of Sub-picture at the PIP by clockwise.
- 29  () Button
- Exchange main-picture with sub-picture at the PIP.
- 30  (Red) Button
- Enable, Resize and Disable the Sub-picture.
- 31  Button
- Make a bookmark while playback or time shift.
- 32  Button
- Go to the bookmarked position.
- 33  Button
- Go to backward by 10 seconds per each pressing of this button.
- 34  Button
- Display file list. (Recorded service list, MP3 file list, Application file list)
- 35  () Button
- Select the period for repeated playback or cutout.
 - Display the channel list of Sub-picture.
- 36  Button
- Change 4:3 Center Extract -> 4:3 Center box -> 16:9 Full screen.

*      Buttons

Above buttons is a kind of function key. So, the function in each OSD Screen can be referred in each instruction message in help window.

INSTALLATION (Connection)


INSTALLATION (Connection)

- First, connect both the aerial antenna and the TV to the PVR.
- There are some of the most common ways to connect the equipment in this manual.
- There are several ways of connecting the PVR to the existing Audio/TV system.
We recommend one of the following setups.
- If you have problems with your connections and need help, contact your dealer or service provider.

Connection to TV, VCR and Hi-Fi


1) Connection to the TV with the SCART Cable.

Connect one end of the SCART cable to the TV SCART socket on the PVR and the other end to a SCART socket on the TV.

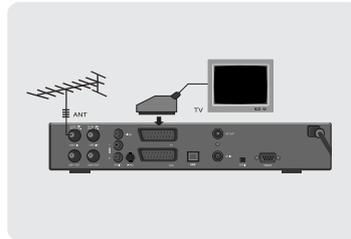

2) Connection to the VCR with the SCART Cable.


Connect one end of the SCART cable to the VCR SCART socket on the PVR and the other end to a SCART socket on the VCR.

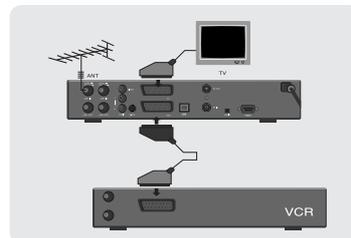

3) Connection to the TV with the CINCH Cable.

Connect one end (3 connectors) of the CINCH cable to the AUDIO-RIGHT (red), AUDIO-LEFT (white) and the VIDEO output (yellow) socket on the PVR.

Connect the other end (3 connectors) to the AUDIO-RIGHT (red), AUDIO-

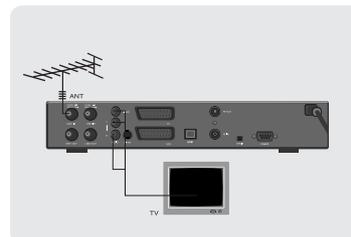

GETTING STARTED

GETTING STARTED

Press the Power () button to operate the PVR from the STANDBY mode. Now, the Info Box will appear for a given time and disappear. By pressing  button, the Info Box will remain on the screen. The display time of the Info Box is adjustable in the System Setting menu of the Main menu.

IMPORTANT: Before taking charge of your new PVR, some important technical settings are essential.

- First, press the MENU () button on the RCU to make the Main Menu appear.
- Go to the **Installation** item and press button.
- Then, press  button at **Channel Search** item and go to the **Channel Search** menu.
- Set the **Search Mode** to the **Auto**. (**Manual** or **advanced**)
- Select the **Antenna Supply 5V** to **On** or **Off** according to your antenna.
- Select the **Start Search...** item and press  button.
- The search procedure will take a while. Press  button when the searching process is finished to confirm and save the new channel list.
- For further information, please refer to the MENU OPERATIONS in this manual.

MENU OPERATIONS


MENU OPERATIONS

Now this chapter assumes that the PVR system has been installed correctly, meaning:

- The aerial antenna for the PVR has been installed, connected to the PVR.
- The PVR is connected to the TV.
- The RCU has batteries and ready to control the PVR.

If the PVR has not been installed or connected properly, please refer to the **INSTALLATION** menu on this manual.

Many of the functions of the PVR are available from the Main Menu. Press  button to open it.

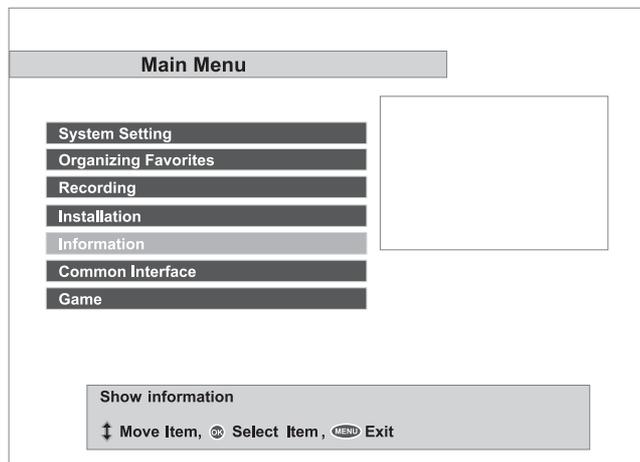

MENU OPERATIONS

System Setting

System Setting	
Time Setting	
Timer Setting	
Parental Control	
Language Setting	
A/V Output Setting	
OSD Transparency	↔ 5%
Info Box Display Time	5 Sec
Info Box Position	+0 line
Time Shifting	Enable

Change OSD Transparency
↔ Changes Transparency,  Previous Menu

Time Setting

The exact local current time can be adjusted by using the **GMT**, the **Time Offset** and the **Mode** sub menus.

Time Setting	
Mode	↔ Auto
Local Time	08:19
GMT	
Time Offset	00:00

Changes the time setting mode.
In order to change the local time, set it to manual mode.
↓ Moves Item, ↔ Select Item,  Previous Menu

MENU OPERATIONS

Mode

By using ,  buttons, you can select on of the **Auto/Manual** mode. The Auto mode updates the time settings automatically by the GMT received from the broadcast and the Time Offset you have inserted. The Auto mode is recommended.

Local Time

The Local Time is adjustable only when the Mode is in the **Manual** mode. Adjust the current time, if necessary, by using the numeric buttons and ,  buttons.

GMT

GMT is referred to the standard time of Greenwich. It cannot be changed.

Time Offset

The current time of the local area can be inserted. In another words, insert the time difference of the local time zone from the GMT. For example, if the local area is Seoul (the time difference from the GMT is 9), insert 9:00. The time is adjustable by using ,  buttons, 15 minutes at a time.

Timer Setting

01	21 FASHION TV	08/03-Wed	11:39	30Min	OT	R
02	70 DWtv	07/02-Mon	13:00	60Min	WL	

Service Number Service Name Reseved Date and Time to Start recording Duration Mode Record

To insert new entry of Timer Setting, press  (Red) Button. Press  button to edit the entry, and press  (Green) button to delete the selected entry. There are **Record ON** and **OFF** modes in **Timer Setting**.

A. Record ON : This function is used for the delayed recording to the HDD of PVR.

- **Type :** Select TV or Radio by pressing ,  button.


MENU OPERATIONS

- **Service** : Select the service to be reserved for recording by pressing , button.
- **Tuner Select** : Select **Tuner1** or **Tuner2** by pressing button.
- **Mode** : By using , buttons, select one among **One Time**, **Everyday**, **Every Weekend**, **Weekly**, and **Every Weekday**.
- **Date** : Select the recording start date by pressing , buttons.
- **Start Time** : Select the recording start time. , buttons and – buttons are available.
- **Duration** : Select the recording duration by pressing , buttons.
- **File Name** : To change file name as you want, press button. The keyboard will appear.
- **OK** : To confirm the setting for the reserved recording, press button.

B. Record OFF: It is a useful function for reserved recording to a VCR or for wakeup function like VCR Timer. If the **Record** item is set to **Off**, the PVR wake up and play it by the reserved conditions, but does not record it to the HDD of PVR.

For details, refer to the explanation of **Record ON**.

Parental Control

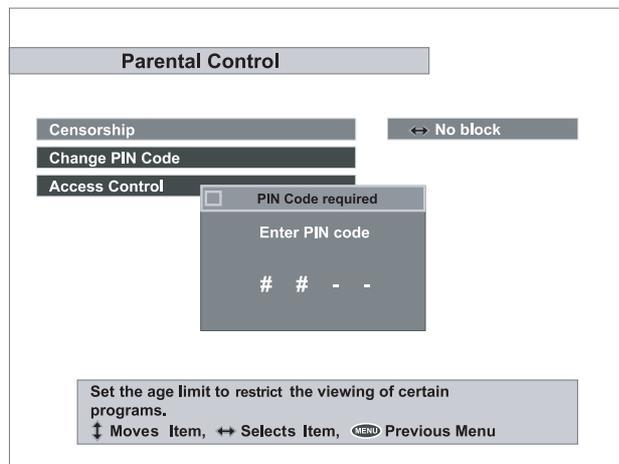

Password to various menus can be configured. The PIN Code box will automatically appear when this menu is selected. The default PIN Code is **0000**.

MENU OPERATIONS

A. Censorship

The **Censorship** item blocks programs according to each specific setting.

Use ,  buttons to select the items below.

No Block : Access to everyone.

Total Block : Access to no one without PIN code.

If the channel is limitation free, the block function will not work.

G : Accessible to General everyone.

PG : Parental Guidance Recommended.

M : Accessible to Mature Audience, aged 15 years old and more.

MA : Accessible to Mature Adult Audience, aged 15 years old and more.


AV : Accessible to Audience/Strong Violence, aged 15 years old and more.

R : Accessible to Restricted, aged 18 years old and more.

B. Change PIN Code

Go to the **Change PIN Code** item to configure new PIN Code. Press  button, then a box will appear on the screen. Enter the PIN code by using the numeric buttons on your RCU.

C. Access Control

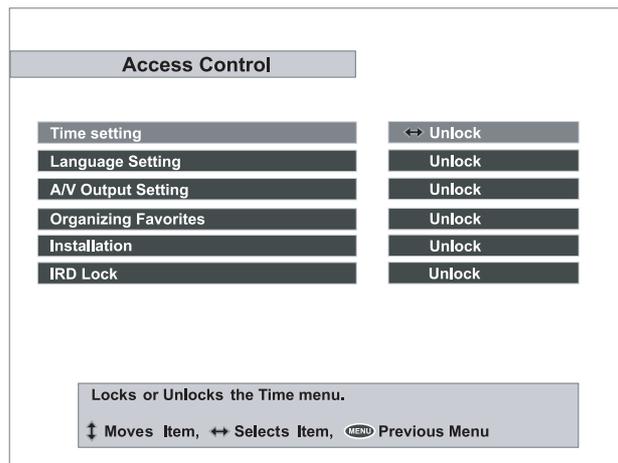

The **Access Control** menu controls access to 6 items: **Time Setting**, **Language Setting**, **A/V Output Setting**, **Organizing Favorites**, **Installation** and **IRD Lock**.

Press ,  buttons to **Lock/Unlock** the access.

Locked means controlling the access to the specific menus with the PIN Code system.

The default PIN Code is **0000**.

MENU OPERATIONS

Language Setting

There are many languages available for the menu.

A. Menu Language

It is an item for changing the language of the Main menu.

Select the language that the menus will be shown in.


[English / French / Deutsch / Italian / Spanish / Arabic / Greek / Turkish / Danish / Swedish / Norwegian / Dutch / Russian / Polish / Persian]

* The supported language can be changed without any notice.

B. Subtitle Language

It is an item for changing the language of the subtitle.

As long as the services support it, the subtitle language is changeable by pressing  button on your RCU.

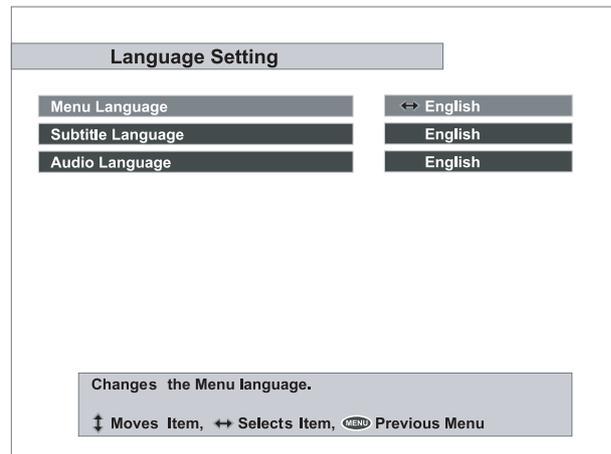

[English / French / Deutsch / Italian / Spanish / Arabic / Greek / Turkish / Danish / Swedish / Norwegian / Dutch / Russian / Polish / Persian]

* The supported language can be changed without any notice.

C. Audio Language

It is an item for changing the language of the Audio.

If more than one audio language is transmitted, you may select one language among the languages transmitted by pressing  button.

MENU OPERATIONS

[English / French / Deutsch / Italian / Spanish / Arabic / Greek / Turkish / Danish / Swedish / Norwegian / Dutch / Russian / Polish / Persian]

* The supported language can be changed without any notice.

A/V Output Setting

The PVR has many A/V Outputs. Control this menu properly according to external components connected to the PVR. Configurations concerning Audio and Video can be made here.

A. TV Type

Select your TV standard. For automatic **PAL/NTSC** selection, set it to **Multi**.

B. Video Output

Select the mode of Video output among **RGB**, **S-Video**, **YUV** and **CVBS** on TV SCART by using ,  buttons.

C. VCR SCART Type

Select the VCR SCART type either **Standard** or **External A/V**. In case of **External A/V**, the source of TV SCART Output will be selected between VCR SCART input and internal AV by pressing  button on the RCU. In case of **Standard**, it will be done automatically by the SCART functionality.

D. TV Aspect Ratio

Select your TV screen format. Select **4:3** or **16:9** mode by using ,  buttons.

E. 16:9 Display Format

If you have a TV set with the 4:3 picture format and transmission is in 16:9, you can select the display format. Select the **Letter Box** or **Center extract** by using ,  buttons.

F. Sound Mode

It allows you to configure the sound mode. Select the **Stereo**, **Mono**, **Left** and **Right** mode by using ,  buttons. The Sound mode is configurable later on by using  button on your RCU.

G. UHF Type


When the PVR is connected to the TV by an RF cable, you may need to select the correct TV standard system. Select the **PAL G**, **PAL I**, **PAL K** mode by using ,  buttons.

MENU OPERATIONS

H. UHF Channel

Select a UHF channel by using ,  buttons. The default UHF channel is CH36. When you change the UHF channel number, you must also change to the same value on the TV. If you do not, there will be no picture and sound.

OSD Transparency

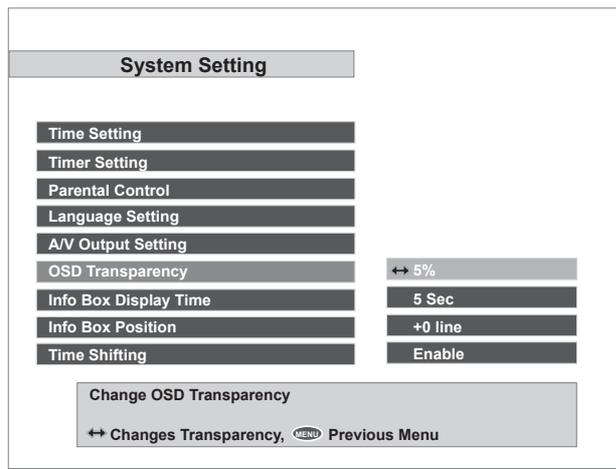

Adjust the OSD transparency of all the menus. The available levels are ranging from **0%** to **50%**.

Info Box Display Time

Adjust the time-out of the Info Box. Set the period of time that the Info Box is displayed on screen. The adjustable time is **0** to **30** seconds, **No info box** and **Never Hide**.

Info Box Position

Adjust the position of the Info Box. It allows you to change the position by using ,  buttons.

MENU OPERATIONS

Time Shifting

To enable the time shifting function, select **Enable**.

If the Time Shifting is enabled, the PVR records the current channel in live. And, you can take advantage of the time shifting function.

To disable time shifting function, select **Disable**. If you don't want to use time shifting function or reduce the power consumption, let the time shifting disable .


Organizing Favorites

This mode is helpful in adding and deleting services to and from the favorite group. Under the menu **Organizing Favorites**, there are three different modes:

Fav List , **Fav CHs** and **TV or Radio Ch List**.

On the **Fav List** mode, four standard lists are selected as the default menus: **News**, **Sports**, **Movie** and **Music**. Up to 30 lists including these lists can be added and renamed. When deleting a service, select a service in the **Fav CHs** section and press the assigned button on the help message.

To add services into **Favorites**, locate the cursor to the desired service in **Ch List** and press  button. To delete a service from Favorites, locate the cursor to the service in Fav **CHs** and press  button.

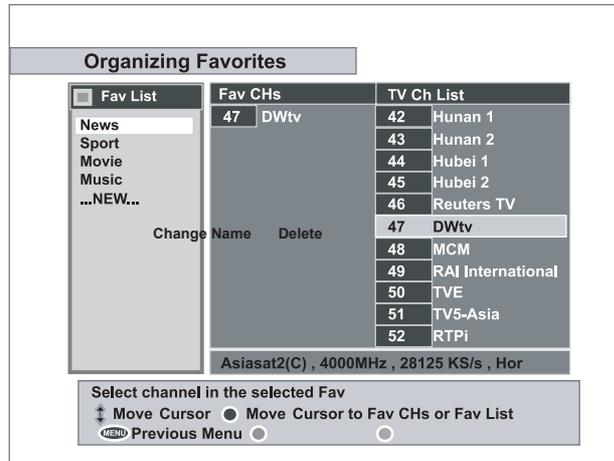

MENU OPERATIONS

Recording

Recording	
Record NO.	↔ 1
Service	53 sat
Mode	↔ Quick
Duration	2 Hour 0 Min
File Name	sat-1
Start	
Stop	
Timer Setting	

No recording
18706 MB Free

Select the record mode.
↓ Moves Item, ↔ Selects Item,  Exit

To record the service you want, you have to set the following options. You can record the service immediately. To reserve a recording, you have to use **Timer Setting** function in System Setting at Main menu. You can go to the **Timer Setting** menu directly by selecting **Timer Setting** item in this menu, too.

A. Record NO.

Two services can be recorded simultaneously. You can distinguish between the two records by this Recording NO. Press ,  button to select **Record NO.1** or **2**.

B. Service

Press  button to display the service list. Select a channel to be recorded.

C. Mode

There are two recording modes.

To record the selected service immediately, select the **Quick** mode.

To record current event including the data in the time shifting buffer, select **Current Event** mode. The **Current Event** mode is valid only when the event information of the channel exists.

MENU OPERATIONS

D. Duration

To change the duration of the recording time, press  or  button.

E. File Name

To change the file name of the service to be recorded, press  button at this item.
You can change the file name by keyboard on screen.

F. Start

To start recording immediately, press  button at this item. For reservation you may use **Timer Setting** in **System Setting** menu.


G. Stop

To stop recording immediately, press  button at this item.

H. Timer Setting


Press  button at this item to go to the **Timer Setting** menu directly.

Installation

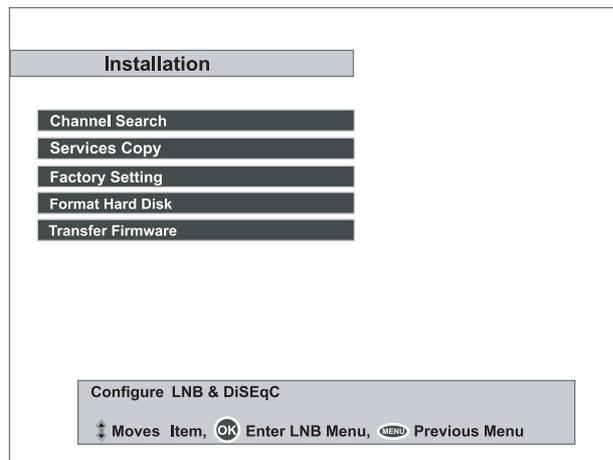

MENU OPERATIONS

Channel Search

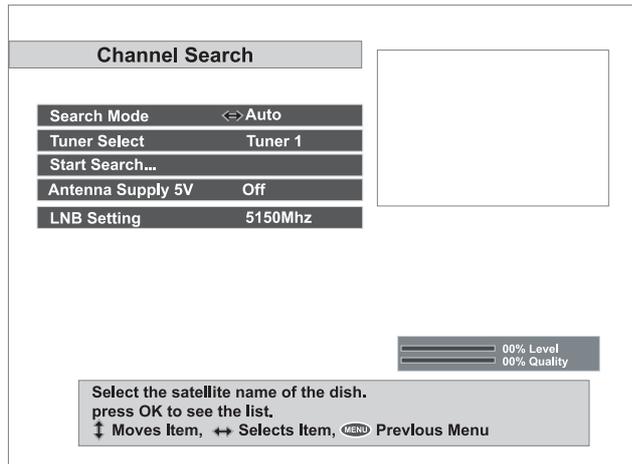

A. Search Mode

There are 3 search modes, **Auto**, **Manual** and **Advanced**. The **Auto** mode enables you to search all the services you can receive. The **Manual** mode enables you to search the services in the channel you want. On the **Advanced** mode, you can search the service by setting the **Audio PID**, **Video PID** or the **PCR PID**.

B. Channel

The available Channels are VHF 6~12 & UHF 28~69, which is based on the Australian specification. The Channel item is valid on **Manual** mode and **Advanced** mode

C. PID

This item is valid when the Search Mode is set to **Advanced** only. Press  button to enter Video, Audio and PCR PID's.

1) Video PID

Insert the Video PID by using the numeric buttons on your RCU.

2) Audio PID

Insert the Audio PID by using the numeric buttons on your RCU.

3) PCR PID

Insert the PCR PID by using the numeric buttons on your RCU.

4) SAVE

To ensure the above Video, Audio and PCR PID change, press  button at this item.

MENU OPERATIONS

D. Tuner Select

Select a tuner for channel searching from the selected channel.

E. Antenna Supply 5V

When using an active antenna, it should be set to **On** to supply power to the Amplifier of the Antenna. (5V/max 100mA)

F. Start Search...

To start the searching process, press  button at this item.

To stop the searching process on the way, press either the  button or the  button. This menu will be shown as long as the PVR is searching for channels. All channels found will be listed in two columns on the screen with TV channels in one column and Radio channels in the other. Please note that the search procedure may take a few minutes.

When the search procedure is completed, the screen will show how many TV and Radio channels have been found. Press  button to save the channels.

Services Copy

In this menu, you can copy the existing channels between Tuner 1 and Tuner 2.

A. Tuner 1 to Tuner 2

Copy the service list of Tuner 1 to that of Tuner 2.

B. Tuner 2 to Tuner 1


Copy the service list of Tuner 2 to that of Tuner 1.

C. All

Add the service lists of Tuner 1 and Tuner 2 and save it to service list of Tuner 1 and that of Tuner 2.

MENU OPERATIONS

Factory Setting

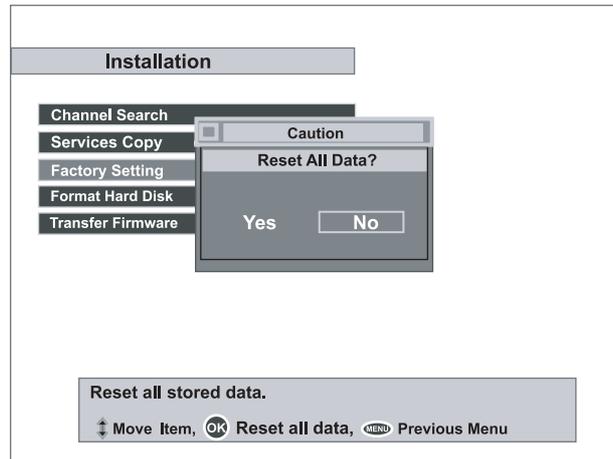

All the stored data can be reset just like it was manufactured.

Format Hard Disk

To format the HDD in PVR, Press **OK** button at this Item.

Formatting Hard Disk will delete all the data and the files recorded in HDD permanently. If a new HDD is installed, it should be formatted because the file structure of PVR is different from others.

You can not use the Time shifting, Recording and playback functions with an unformatted HDD.

Transfer Firmware

A. Transfer Program to Other IRD

It is used to transfer PVR firmware to other PVR for upgrading the PVR.


Notes: Please proceed this menu with connecting the PVR of same model and same specification.

B. Transfer Data to Other IRD

It is used to transfer PVR Data such as service information to other PVR for upgrading the PVR.

Notes: Please proceed this menu with connecting the PVR of same model and same specification.

MENU OPERATIONS

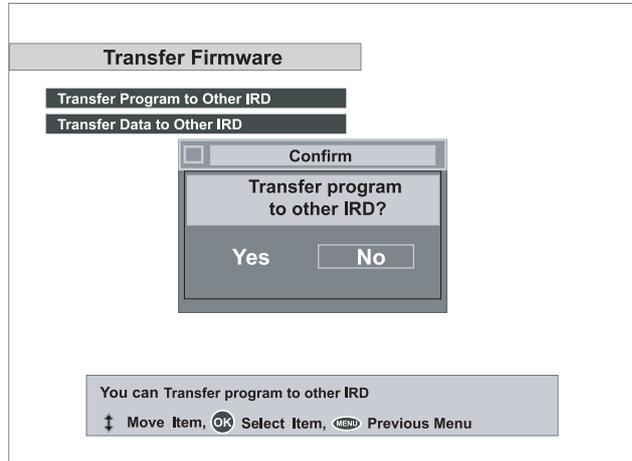

Information

You can check the IRD(PVR) version and refer the calendar.

IRD Status

IRD Status	
System ID	406
Loader Version	L406
Device Version	v5.0.3
Application Version	TF-NPT 5.10.01
Last Update	Apr 02 2003

Check the PVR's system information here. It shows the System ID, Loader Version, Device Version, Application Version and Last Update.

MENU OPERATIONS

Calendar

Press  or  button to select the year. Press  or  button to select the month.

Calendar

August 2002						
Sun	Mon	Tue	Wed	Thu	Fri	Sat
				1	2	3
4	5	6	7	8	9	10
11	12	13	14	15	16	17
18	19	20	21	22	23	24
25	26	27	28	29	30	31

P-/P+ : Next / Previous month
V+/V- : Next / Previous year.

Common Interface

Common Interface

Slot 1 : Irdeto Access

Slot 2 : Not Installed


If the CAM is inserted in Slot 1 ,
you can see the name of the CAM manufacture.
↓ Move Item,  Select,  Previous Menu

The menu differs according to each inserted CAM. If the module has not been installed yet, the phrase **Not Installed** will be indicated.


MENU OPERATIONS

Game

ExBlock

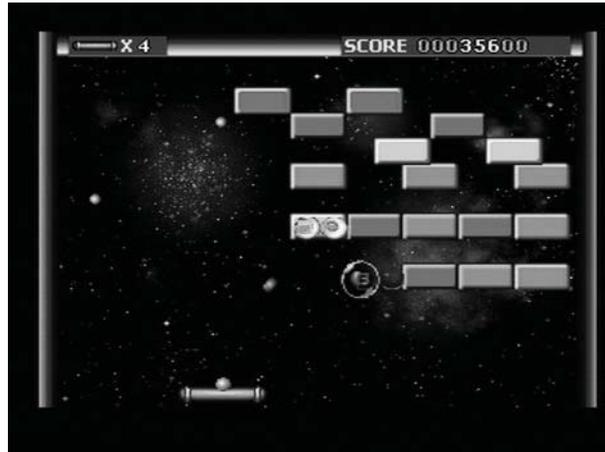


Bomb Hexa

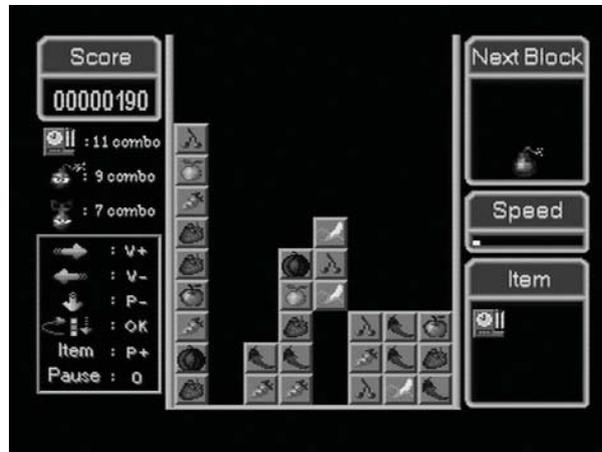

MENU OPERATIONS

Pac Man

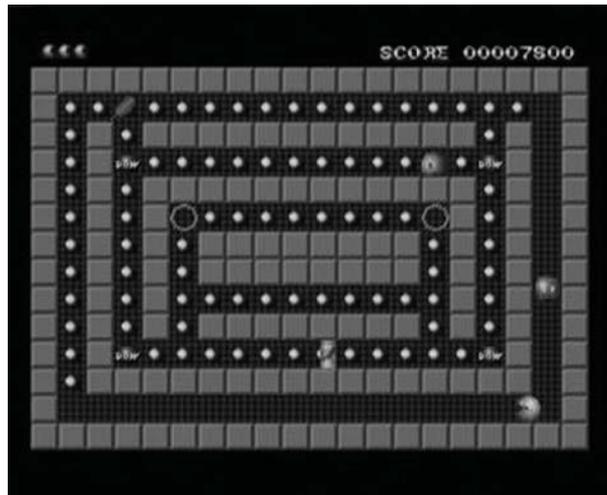

FUNCTION GUIDE

FUNCTION GUIDE

Channel List

TV Services (All Tuners)	
3	MBC TV-LINGK 
52	Medi TV
66	N24
60	ProSieben
65	SAT.1
53	SkyCast 06
54	SkyCast 07
55	SkyCast 08
56	SkyCast 09
Other 4000 H 27500	
	Tuner

Press  button to see the Channel List. The Channel List displays as follows.

- Service provider. (It can be displayed by pressing  button.)
- Channel List by *T1* (Tuner 1) or *T2* (Tuner 2).
- Scrambled Mark by **\$**.

By using  (White) button in the Channel List, you can use the functions as follows.


-  (Red) button: Display the channel List of Tuner 1 or Turner 2.
-  (Blue) button: Display the options. You can use this options by pressing ,  or  button.
 - **Tuner** : Selects among Tuner 1, Tuner 2 and all Tuner.
 - **Show Provider** : Displays the channels by service provider.
 - **Rename** : Renames the marked channel.
 - **Lock** : Makes the marked channel **Unlocked** or **Locked**.
 - **Delete** : Deletes the marked channel.
 - **Add to FAV** : Adds the marked channel to the FAV List

FUNCTION GUIDE

Information Box

Press **i** button on the RCU to see the program information. The Information box displays as follows:

- . Channel Number
- . Channel Name
- . Detailed Program Information
- . Signal Level and Quality
- . Tuner Information
- . Information of subtitle and / or teletext
- . Parental Lock

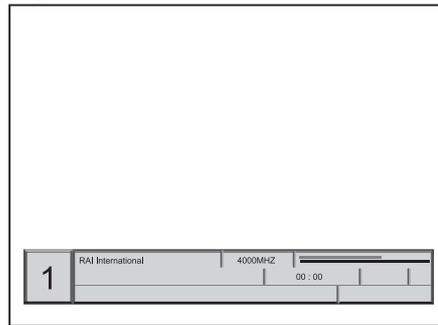

You can hide the Information Box by pressing **i** button.

A. Live picture

Service Number	Service Name	Freq / BW	Signal Strength	
	Event Name	Time Information	CAS, Subtitle, Teletext	Parental Lock Mark
	Event Description	Start Time ~ End Time		

You can see the Current/Next event by pressing **v-** / **v+** button in the information box. To control the volume in the information box, you have to press **v-** / **v+** button two times without interval.

If EPG is available on programs, by using **v-** , **v+** buttons, you can see the EPG. You can see extended information of the event by pressing **i** button once more.

B. Playback

	File Name	Freq / BW	Progress Bar	
	Event Name	Time Information	CAS, Subtitle, Teletext	
	Event Description	Duration		

C. MP3

	Title	Bitrate	Progress Bar	
	Artist	Time Information		
	Album	Duration		

FUNCTION GUIDE

EPG (Electronic Program Guide)

To display the information about currently being broadcasted as well as those that will be broadcasted next, press  button on the remote control unit.

If EPG is available on programs, you will see the detailed description of the programs, start/end time and programs schedules etc.

,  buttons will be used to move program and to see next program schedules.


,  button will be used to switch the channel.

 button makes the reservation for the next program.

 button shows extended information of the event.

 button will change the contents of EPG between TV and Radio services.

 (Red) button switches the EPG from Single Service to Multi Service and in opposition.

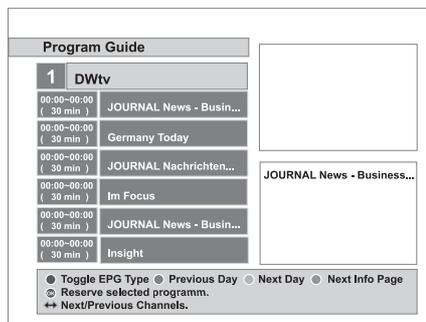

Subtitle

You can choose a language of subtitle using  button on the RCU.

If the broadcaster provides subtitles, you can see  symbol in the Information Box.

Teletext

If the broadcaster supports teletext, you can see  symbol in the Information Box.

There are VBI insertion mode and software emulation mode in teletext. In the VBI insertion mode, which is always on, you can watch the teletext with your TV using the RCU of your TV. To watch teletext with VBI insertion, your TV must support teletext.

In the software emulation mode, you can watch the teletext even though your TV does not support teletext. You can watch the teletext using the RCU of PVR.

Press **Teletext** () button to watch the teletext with software emulation mode.


Press  button once more or **EXIT** () button to escape from teletext.

FUNCTION GUIDE

Sound Track

You can choose a language of soundtrack by pressing  button when a broadcaster supports various languages of soundtrack.


Also, it is possible to choose a mode among Stereo, Mono, Left and Right using ,  buttons.  button is used for multifeed function, too. If the multifeed is available in current service, Multifeed Track will be displayed first. You can change the display to Sound Track selection menu by pressing  button once more.

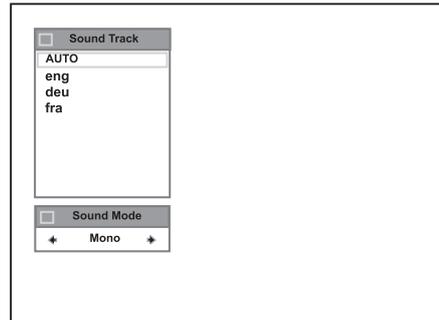

Multifeed

If multifeed is available in the channel, Multifeed Icon () will appear at the right side of the Information box. If available, the Multifeed Track and Sound Track are toggled by  button. It is possible to choose one of the multifeed channel.

Time Shifting

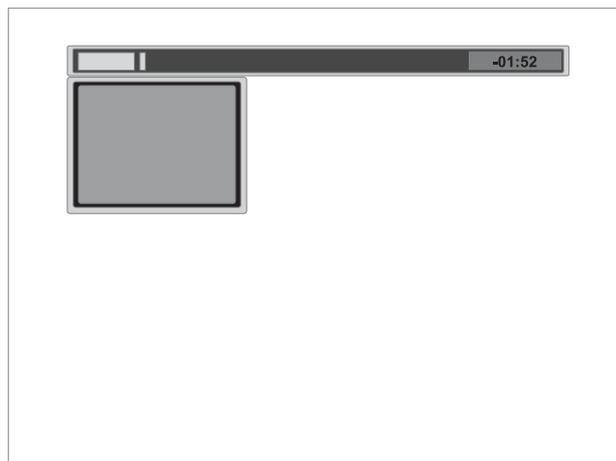


FUNCTION GUIDE

1. To use **Time Shifting** function, the **Time Shifting** option should be enabled.
To find the Time Shifting option menu, follow the steps below.

Main Menu → **System Setting** → **Time Shifting** → **Enable**

2. Press  button to display Time Shifting progress bar. You have to press  button once more to display Time Shifting progress bar during Trick mode. (such as Fast Forward, Reverse Playback, Slow motion)
3. To go to the desired playback position, press ,  button or ,  button.
This function is valid while the Time Shifting progress bar is displayed.
4. To remove the Time Shifting progress bar at once, press ,  or  button.
5. To go to the live video, press  button.
6. To start Instant Time Shifting, press  button. The start position of the playback goes 10 seconds back per each pressing of  button.

Recording while Time Shifting

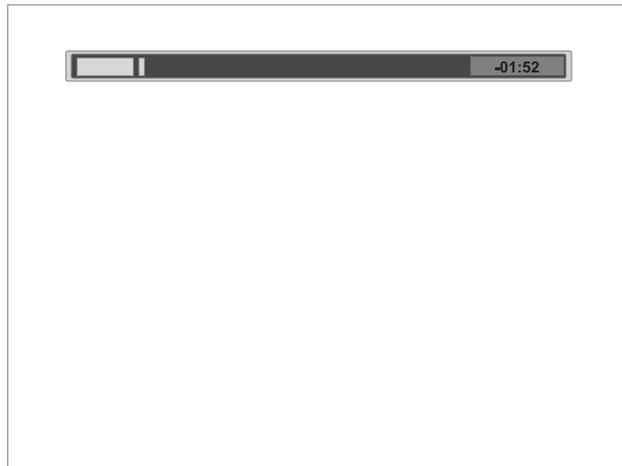

1. Press  button to display Time Shifting progress bar.
2. To go to the desired position, ,  button or ,  button.
3. Press  button to start recording.
4. The recording will be started from the selected position.
5. Press  button to stop Time Shifting.
6. Press  button once more to stop recording.

Caution : If the recording time is less than about 1 minute, the recorded file will not be saved.


FUNCTION GUIDE

Recording, Checking and Editing the reserved delayed recording

To record services, refer to the following steps. There are four kinds of recording references.

Caution : If the recording time is less than about 1 minute, the recorded file will not be saved.

Immediate Recording by RECORD button

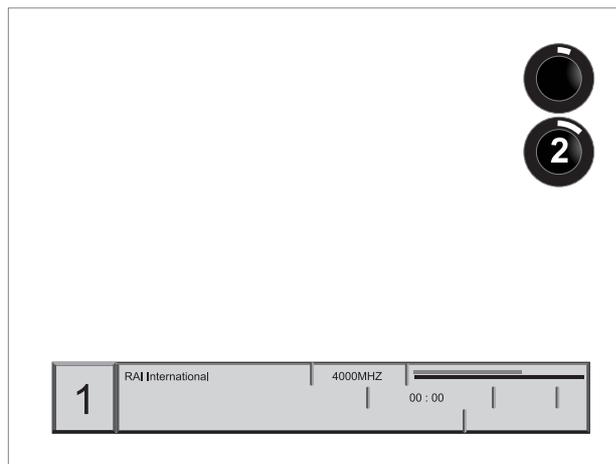

a. Recording

Press  button to record the service you are watching. To specify the stop time, go to **Recording** menu and modify **Duration** item. To go to the **Recording** menu, press  button once more or go to **Recording** item of Main Menu.

b. Checking and modification

A **Recording Icon** () will be displayed on the upper rightmost of the TV screen for several seconds if the recording is initiated. Press  button to see the **Recording Icon**.


To check and modify the recording options, go to **Recording** menu.

c. Stop

Press  button and select the service to stop the Recording by confirming  button. If only one service is being recorded, it is possible to stop the recording by pressing  button twice.

FUNCTION GUIDE

Immediate Recording by Menu Selection

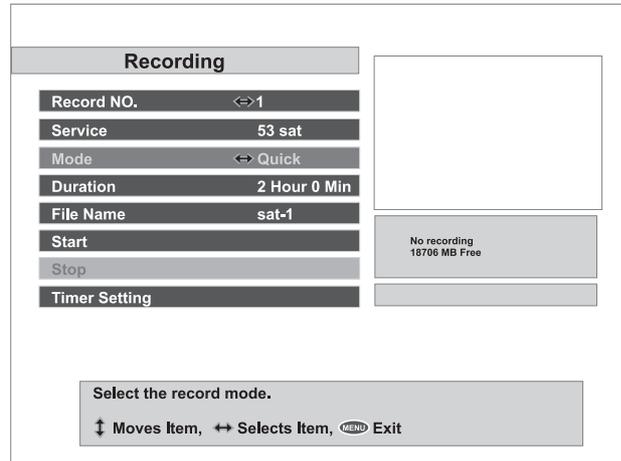

* Precaution (Dual Recording)

Before starting recording on the Menu, you have to select one of the **record NO.** There are **Record NO.1** and **2** to distinguish between the two records for dual recording. In case of one channel is recorded at **Record NO.1**, only **Duration** and **Stop** item of **Recording** menu will be enabled. But, all the sub-menu of **Record NO.2** will be enabled.

a. Recording

To go to **Recording** menu, press  button and select **Recording** item by pressing  button. Select the options that you want to record with. Select **Start** item and press  button. For detailed information, refer to the explanation of **Recording** menu in Menu operations.

b. Checking and modification

A Recording Icon () will be displayed on the upper rightmost of the TV screen for several seconds if the recording is initiated.

To check and modify the recording options, go to **Recording** menu.


c. Stop

Press  button and select the service to be stop the Recording by pressing  button.

Otherwise, go to **Recording** menu and press  button at **stop** item.

FUNCTION GUIDE

Delayed Recording

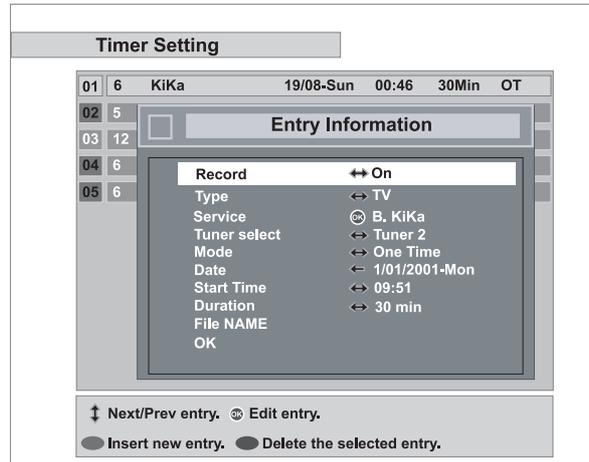

a. Record

Go to **System Setting** menu and press  button at the **Timer Setting** item. At **Timer Setting**, press  (Red) button to insert a new recording entry. Set the options that you want to record with by using  or  button. For detailed information, refer to the explanation of **Timer Setting** menu in **Menu operations**.

b. Checking and modification


To check the delayed recording options, go to **Timer Setting** menu. You can change the options there.

c. Cancel

To cancel the delayed recording, go to **Timer Setting** menu. Press  (Green) button and confirm with  button at **Cancel** item.

FUNCTION GUIDE

Recording by EPG

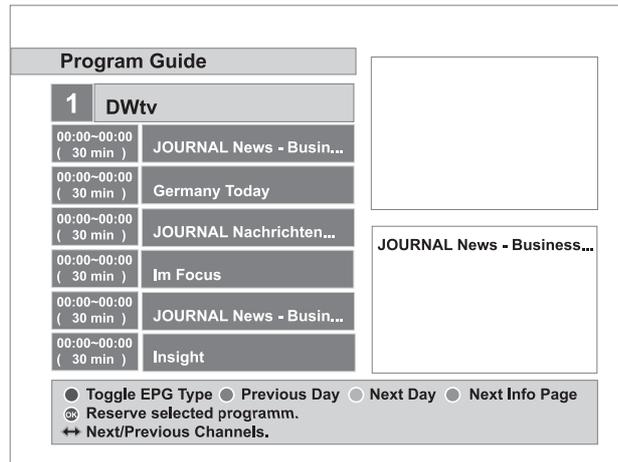

a. Record

Press button to display EPG. Select a service that you want to record, and press button. Instead of button, two times pressing of button is valid for delayed recording.

The Recording mark (**R**) will be displayed by pressing button two times.

For reference, if you press button one time, you can reserve the event, which means switching to the reserved event automatically at the event time.

This button toggles CANCEL successively.

b. Checking and modification

Press button to display EPG. The reserved services for delayed recording will be marked with a Recording mark (**R**) or Reserved Event mark (**P**).

c. Cancel

Press button to display EPG. To cancel a reservation of delayed recording, select the service you want to cancel and press button again. Instead of button, button is valid by toggling. The Recording mark (**R**) will disappear.

FUNCTION GUIDE

Playback a Recorded Service



1. Press button to display the recorded service list.
2. Select a recorded service at the list.
3. Press button to start playback.
4. Also you can use several useful editing functions at **Recorded Services** menu as followings.
 - A. **New Folder** : Press (Green) button to make new folder.
 - B. **Move to Folder** : Press (Yellow) button to move the Service to a folder.
 - C. **Option** : By pressing (Blue) button, you can use optional functions such as
 - **Sorting by Alphabetic, Size, Time.**
 - **Rename**
 - **Lock**
 - D. **Delete File** : Press button to delete the recorded service.
 - E. **Event Info** : Press button to display extended event information.

* Successive Playback of Services

Press (Red) button to number the services among the recorded services list and press or button to playback the multi-services in sequence automatically. This function is very convenient for you to descramble the pay TV service with proper CAM module and smart card. You can descramble the scramble services and copy it while you are not using this PVR.

* MP3 and TAP

Press , buttons at recorded service list to go to MP3 files and program files(TAP).

FUNCTION GUIDE

Stop

1. This function is available for playback.
2. To stop playback, press  button.
3. You can stop the recording in the recorded service list, too. To stop the recording, press  button at the selected recording file.

Pausing

To pause the live picture or playback, press  button.
Press  button again or  button to quit pausing.

1. Pause from live video

If the PAUSE is kept more than 10 seconds with enabled Time Shifting mode, the live picture is changed to time-shifted playback. The video continues from the paused image when resumed from PAUSE.

2. Pause from Time Shifting

The video continues from the paused image when resumed from PAUSE.

3. Pause from Playback

The video continues from the paused image when resumed from PAUSE.

Slow Motion Playback

1. To playback in slow motion (without sound), press the  button.
2. Slow motion speed can be adjusted by pressing the  button repeatedly.
3. There are 3 steps (1/2, 1/4, 1/8) in slow motion playback.
4. Press  button to resume playback with normal speed.
5. The slow motion function is available for the playback and the time-shifted playback.

Fast Motion Playback

1. If there is a Time Shifting or Playback progress bar, remove the progress bar by pressing  button.
2. Press  button for fast motion playback. To change the playback speed, press  button repeatedly.
3. There are 3 steps (2, 4, 6) in fast motion playback.
4. Press  button to resume playback with normal speed.
5. The fast motion function is available for the playback and the time-shifted playback.

FUNCTION GUIDE


Fast Forwarding and Rewinding

1. Press  button to display Time Shifting or Playback progress bar.
2. To go to the desired playback position, press button  or  button. This function is valid while the progress bar is displayed.
3. To remove the progress bar at once, press  button.

Reverse Playback

1. If there is a Time Shifting or Playback progress bar, remove the progress bar by pressing  button.
2. Press  button for reverse playback. To change the playback speed, press  button repeatedly.
3. There are 3 steps (1,2,3) in reverse playback.
4. Press  button to resume playback with normal speed.
5. The reverse playback function is available for the playback and the time-shifted playback.

Bookmark

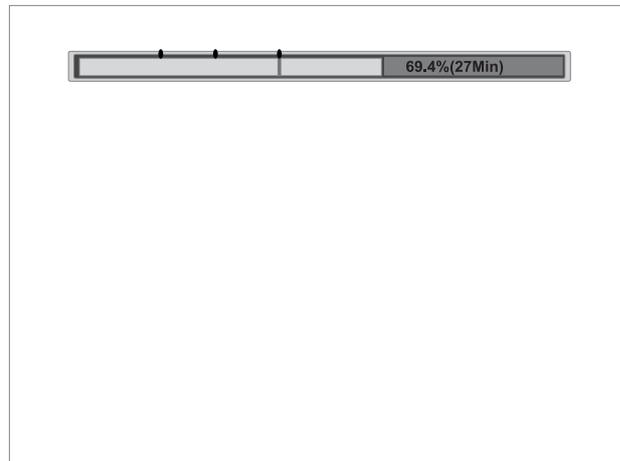

You can jump to a position directly by bookmark function in playback and time-shifted playback. To search positions very quickly and easily, use bookmarks. It is impossible to use the bookmark in the following conditions.

FUNCTION GUIDE

- Timeshifting is disabled and you are watching live picture.
- You are recording 2 services, and you are watching the other service.

1. Add a bookmark

To add a bookmark, press **BOOKMARK** () button at the position you want to add it. You can make the bookmark at maximum 64 positions.

2. Go to a bookmark

Press **GO TO BOOKMARK** () button to jump to the next bookmark. Then, the PVR plays from the book marked position.

3. Delete a bookmark

To remove a bookmark, you have to display the progress bar by pressing  button. Select the bookmarked position by **GO TO BOOKMARK**() button and press **BOOKMARK** () button.

4. 30 seconds forward

If there is no preset bookmark, the PVR plays every 30 seconds forward by pressing **GO TO BOOKMARK** () button.

Recording The Descrambled Live Service

1. Select the live picture you want to record. Descramble the service with a proper CAM and smart card. The live service should be decoded well with the proper CAM and smart card.
2. Start recording according to the recording procedure.
3. During recording, don't change the channel neither try the time shifting function.

Caution : If there is any disturbance such as channel changing or time shifting during recording, the recorded file will be changed to the scrambled format from this position. If the recording time is less than about 1 minute, the recorded file will not be saved.

Descrambling Recorded Services

1. Select and playback a service you want to descramble. Descramble the service with a proper CAM and smart card. The playback service should be decoded well with the proper CAM and smart card.
2. Press  button to display Playback progress bar.

FUNCTION GUIDE

3. To go to the desired position, press  button or  button.
4. Start playback and the picture should be descrambled with a proper CAM and smart card. The fast/slow motion descrambling is possible by fast/slow motion playback.
5. Start recording by **RECORD** () button.
6. The video displayed on TV will be recorded.
7. Press **STOP** () button to stop recording.
8. Press **STOP** () button again to stop playback.
9. You can playback the multi-service(Pay TV) in sequence. For detailed explanation, refer to **Playback a Recorded service**.

Caution : If the descrambling time is less than about 1 minute, the recorded file will not be saved.

Repeated Playback mode

The repeated Playback mode works only in playback mode. It does not work in time shifting mode. There are two repeated Playback modes.

1. Repeating the whole selected service.

- a. Start playback a recorded service.
- b. Press  button without the progress bar to repeat the whole selected service.
- c. Press  button once more to cancel the repeating playback.

2. Repeating the selected region.

- a. Start playback a recorded service.
- b. Press  button to display Playback progress bar.
- c. To specify one end of region, press the  button with the progress bar.
- d. Move the cursor by  pressing (or ) or  (or ) button.
- e. To specify the other end of region, press the  button once more. The color of the selected region will be changed to green.
- f. Press  button once more to cancel the repeating playback.

FUNCTION GUIDE

Copying from Recorded Services




1. Select and playback a service to copy.
2. Press  button to display Playback progress bar.
3. To go to the desired position, press  button or  button.
4. Start playback the recorded video you want to copy. The fast/slow motion copying is possible by fast/slow motion playback.
5. Start copying by  button.
6. The video displayed on TV will be copied.
7. Press  button to stop copying.
8. Press  button again to stop playback.

Caution : If the copying time is less than about 1 minute, copying will not be done successfully.

FUNCTION GUIDE

Cut Out/ Save Selected Region

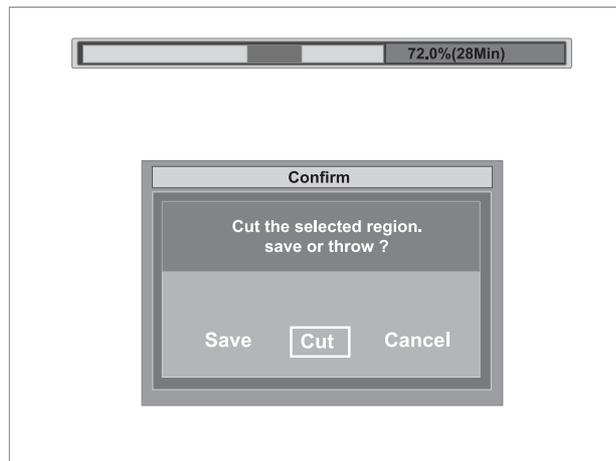

1. Start playback a recorded service.
2. Press  button to display Playback progress bar.
3. To specify one end of region, press the  button with the progress bar.
4. Move the cursor by pressing  (or ) or  (or ) button.
5. Press  button to cut or save the selected region. Then, a message box appears.
6. To cut out selected region, press the  button at **cut** item in the message box.
7. To save the selected region, press  button at **save** item in the message box.

Time Shifting while Recording


During single recording, Time Shifting is possible. But, if you are recording 2 services at the same time, Time Shifting is possible only in the recorded channel.

Zapping while Recording

For the tuner being recorded with, all the channels in the same Channel can be selected. For the other tuner, all the scanned channels can be selected.

FUNCTION GUIDE

Picture In Picture (PIP)

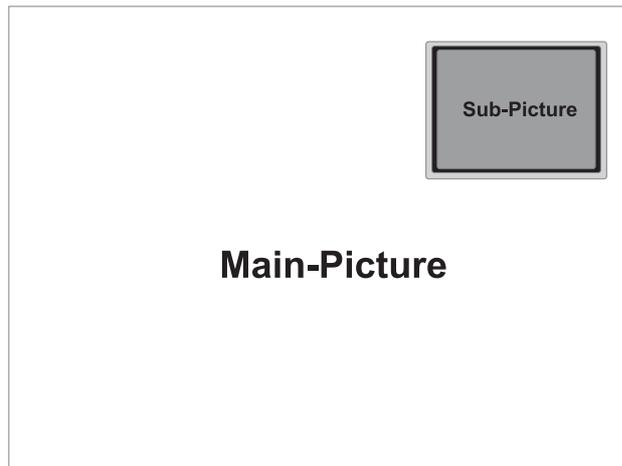

1. Press **Red** button to display PIP. Press **Red** button repeatedly to change the size of sub-picture or to remove the sub-picture.
2. At PIP screen, press **Sat** () button to exchange main-picture with sub-picture.
Remarks: It is not possible to exchange main-picture with sub-picture when a recorded service is in playback in main-picture and a live service plays in sub-picture.
3. Press **Left** or **Right** button to move the position of sub-picture.
4. To display the service list of main-picture, press **OK** button. You can select a service in the service list.
To display the service list of sub-picture, press **Right** () button.
5. If the both of main and sub-picture are scrambled, only the main-picture will be played.

Dual Recording


1. Press **Record** button to start Recording.
2. You can use the Time-shifting function while recording another service. It is possible to record two services at the same time, too.
3. To record the 2nd service, press **Record** button at the service you want to record.

FUNCTION GUIDE

- You can check the status of recordings in the recorded service list. To check it, move the cursor to the file that is being recorded.
You can stop the recording there, too. To stop the recording, press  button at the selected recording file.
- It is possible to stop the recording in the live picture. To do it, press  button and press  button after selecting the recording by ,  button.

File List

The file list has 3 lists. They are **Recorded Services**, **MP3** and **Program Files**. The lists are selected by ,  buttons. The File list is displayed by pressing  button.

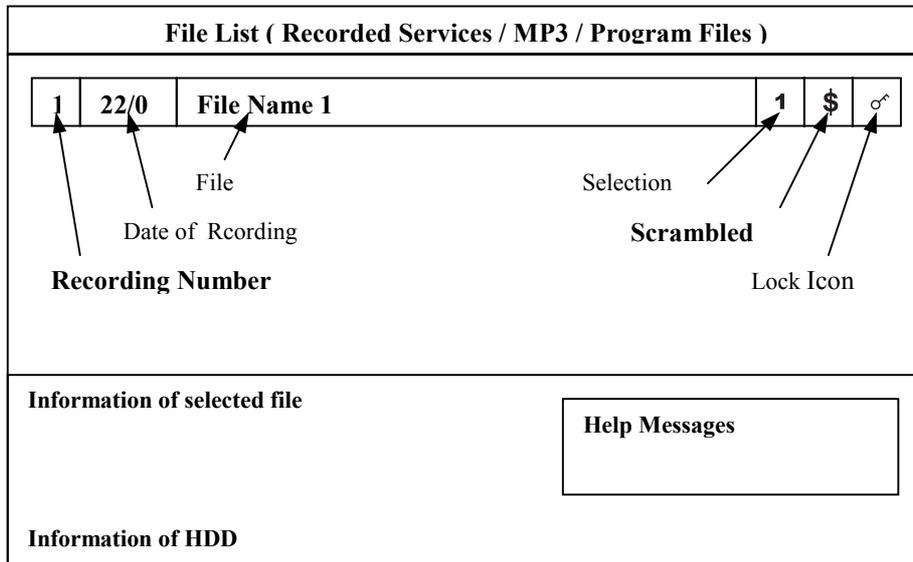

Recorded Services List

The file list is displayed by pressing  button. The file list of **Recorded Services** can be selected by ,  buttons from other list.

- You can see the file number, file name, date of recording, information of scramble, locking, Service name, event information, file size, HDD information, etc.

FUNCTION GUIDE

2. Folder

A new folder can be made by pressing  (Green) button. The new folder will be named as GROUP #. The name can be changed by option (Blue) button. The keyboard will be displayed if you select the **Rename** there.

3. Move

Press  (Yellow) button after selecting a file you want to move. The lists of Folders will appear. You can select a folder you want.

4. Delete

Press  (White) button after selecting a file you want to delete. You have to confirm it to delete at confirmation box.

5. Sorting, Rename, Lock

Press  (Blue) button to display option list. You can sort, rename and lock the selected file or folder. If a file is locked here, the **Lock icon** will appear in the file list.

6. Icons

Scrambled Icon

Icon (color)	Description
 (Yellow)	Scrambled
 (Yellow/Green)	Partially Scrambled
 (Green)	Decrambled
None	Non-scrambled (FTA)

Lock Icon ()

It means that the file is locked. To play the files you have to enter the PIN code.

7. Playback

To playback the selected file, press  button or  button.

8. Successive Playback of Services

Press  (Red) button to number the services among the recorded services list and press  or  button to playback the multi-services in sequence automatically.

This function is very convenient for you to descramble the pay TV service with proper CAM module and smart card. You can descramble the scramble services and copy it while you are not using this PVR.

9. Successive copy of Services

Select the services you want to copy by pressing  (Red). You can start copying by pressing  button.

10. Event information

If there was Event information when the service was recorded, you can see the information by pressing  button.

FUNCTION GUIDE

MP3 File List

The file list is displayed by pressing  button. The file list of **MP3 files** can be selected by  ,  buttons from other list.

1. You can download the MP3 files via USB from PC using Altair.exe.(You can get it from www.topfield.co.kr) The list of MP3 files will be displayed here.
2. **Folder**
A new folder can be made by pressing  (Green) button. The new folder will be named as GROUP #. The name can be changed by option (Blue) button. The keyboard will be displayed if you select the **Rename** there.
3. **Move**
Press F3 (Yellow) button after selecting a file you want to move. The lists of Folders will appear. You can select a folder you want.
4. **Delete**
Press  (White) button after selecting a file you want to delete. You have to confirm it to delete at confirmation box.
5. **Sorting, Rename**
Press  (Blue) button to display option list. You can sort, rename the selected file or folder.
6. **Play**
To play the selected file, press  button or  button.
7. **Successive Playback of MP3 files**
Press  (Red) button to number the files among the file list and press  or  button to play the files in sequence automatically.
8. **Play by folder**
To play the files in specific folder, select a folder and press  button.

Program File List

The file list is displayed by pressing  button. The file list of **Program files** can be selected by  ,  buttons from other list.

1. You can download the TAP(Topfield Application Program) via USB from PC using Altair.exe.(You can get it from www.topfield.co.kr). The list of the TAP will be displayed.
2. **Folder**
A new folder can be made by pressing  (Green) button. The new folder will be named as GROUP #. The name can be changed by option (Blue) button. The keyboard will be displayed if you select the **Rename** there.
3. **Move**

FUNCTION GUIDE

Press F3 (Yellow) button after selecting a file you want to move. The lists of Folders will appear. You can select a folder you want.

4. Delete

Press  (White) button after selecting a file you want to delete. You have to confirm it to delete at confirmation box.

5. Sorting, Rename

Press  (Blue) button to display option list. You can sort and rename the selected file or folder.

6. Run

To run the selected file, press  button.

7. Auto Run

If you want a program runs automatically when the PVR starts up, move the program to the **Auto Start** folder.

If you are pressing the  button when the PVR starts up, the program in the **Auto Run** folder will not run. Remove the program from the **Auto Run** folder if you do not want to auto run.

Progress Icon

There will be Icons during Playback, Time Shifting, Recording and Copying. They will be displayed for a seconds. To display it again, press  button.

Icon (color)	Description
 (Red)	Recording. - Small Circle in the large circle means the current service you are watching is being recorded. - The number in the large circle means recording number. And, the service being recorded is not the service you are watching. - The outer circle mean displays the rate of progress.
 (Green)	Playback. - The figure in the circle shows you the playback speed. - The outer circle displays the rate of progress.
 (Red)	Copying. - The character C in the circle means copying. - The outer circle displays the rate of progress.

Software Upgrade

The PVR has stable and convenience software to use. But, to improve the PVR the new software of the PVR may be released.

Whenever a problem is found or functions are added or modified, the software in the PVR has to be upgraded to enjoy better function.

The latest news, software, utility, driver, product and manual will be found at Topfield website <http://www.topfield.co.kr>.

There are some methods to download the new software.

(a) PVR to PVR download via RS232C

It is possible to download the firmware or channel data from PVR to another PVR.

(b) PC to PVR download via RS232C

You need the **TFD-down.exe** to download the software.

(c) PC to PVR download USB

You need to the **TFDN_USB.exe** to download the software.

File download and upload via USB


You can upload or download the **TAP**(Topfield Application Program), MP3 and the recorded services to or from your PC. You need to the **Altair.exe** to enjoy it.

You can download the **TFD-down.exe**, **TFDN_USB.exe**, **Altair.exe** at Topfield website <http://www.topfield.co.kr>.


The **TAP** application can be developed and used by users. The users can make their own functions by **TAP**. Topfield does not confirm the **TAP** developed by users, and does not have any responsibility.

SPECIFICATIONS

MENU MAP

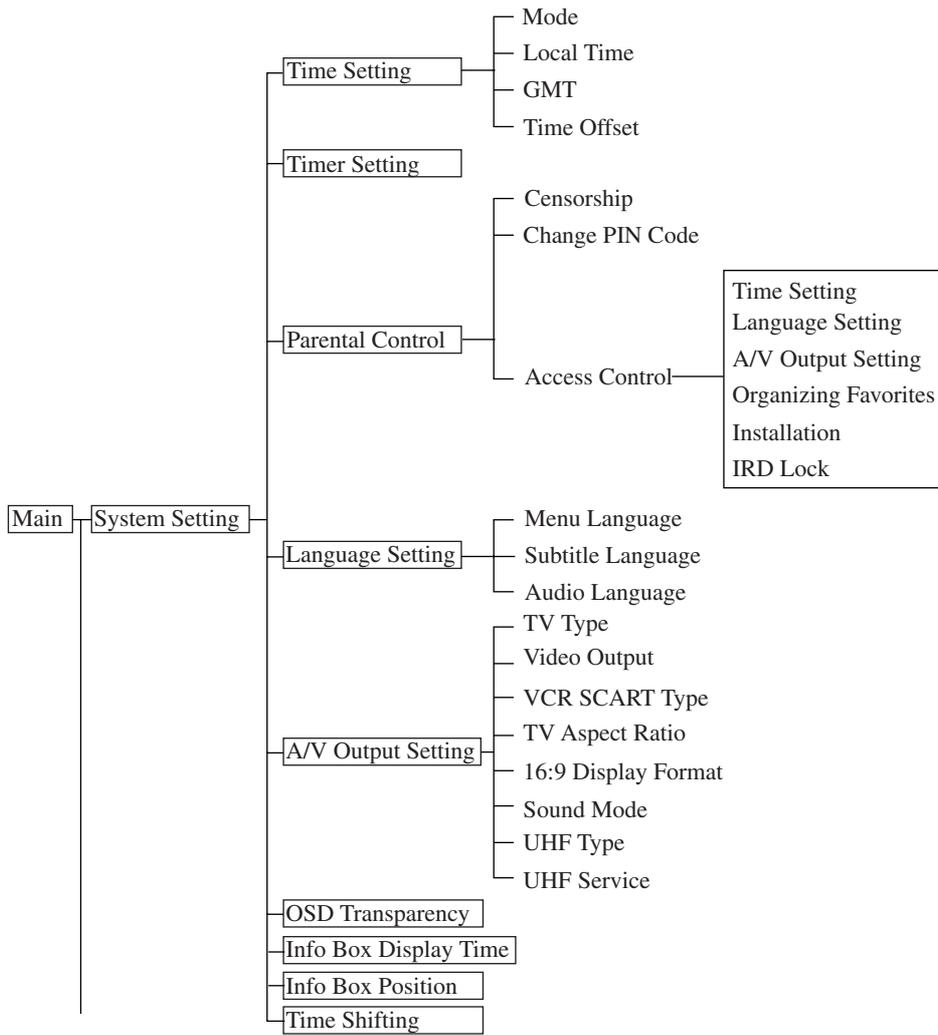

SPECIFICATIONS

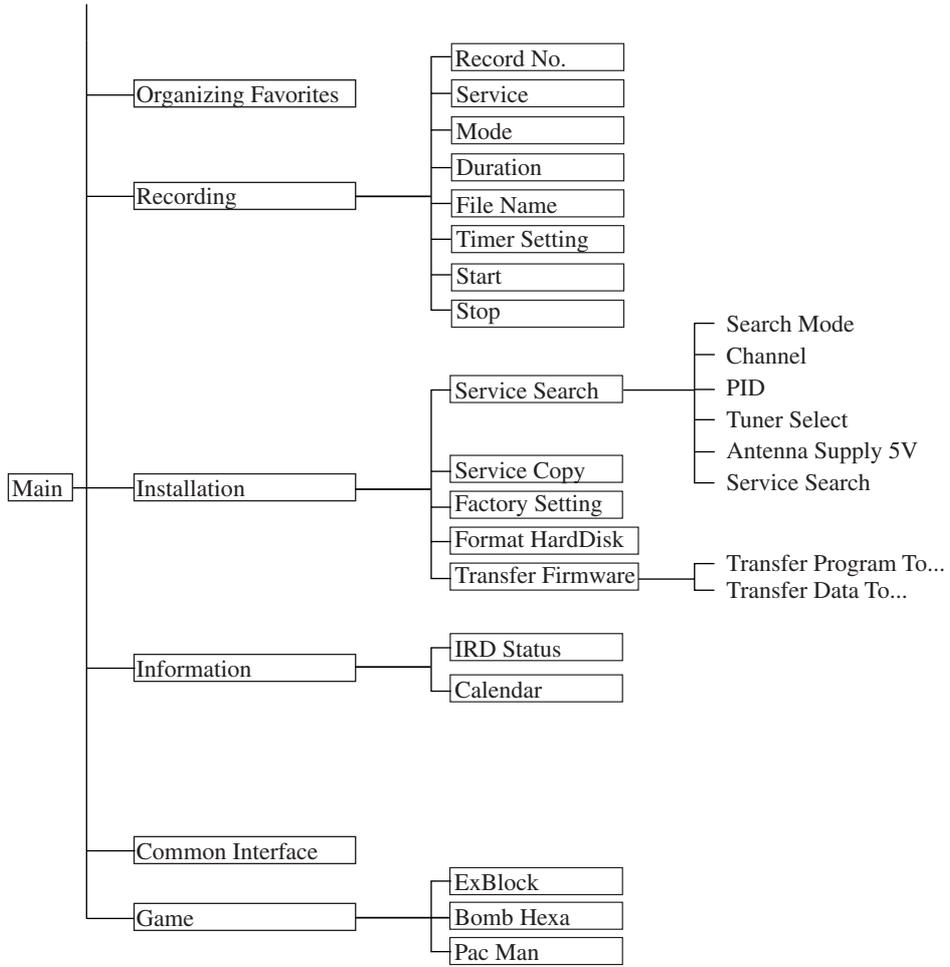

SPECIFICATIONS

SPECIFICATIONS

Tuner & Service Decoder

Item	Specification
2 Tuners	
Input/Loop through Connector	75W, IEC 169-2, Female/Male
Frequency Range	50 ~ 870MHz
Signal Level Input	-78 ~ -20dBm
Modulation	OFDM
Carrier Mode	2k and 8k hierarchical/non-hierarchical
Constellation	QPSK, 16 and 64 QAM
Guard Interval	1/4, 1/8, 1/16 and 1/32

MPEG Transport Stream A/V Decoding

Item	Specification
Transport Stream	ISO/IEC 13818-1 MPEG-2
Profile Level	2 x MPEG-2 MP@ML (PIP)
Aspect Ratio	4:3, 16:9, Pan & scan, Letterbox
Video Resolution	720 x 576
Audio Decoding	MPEG-1 Layer 1, 2 & 3

Main System

Item	Specification
Main Processor	MIPS
Memory	Flash-ROM: 2MB
	RAM: 64MB
	EEPROM: 2Kb
HDD	80GB, 120/160GB(optional)

Front Panel & RCU

Item	Specification
7 Keys	CH-/+, VOL-/+, MENU, OK, STANDBY
4-digit 7-segment LEDs	Service number or Time display
3 LEDs	TV/SAT, REMOTE, STANDBY
RCU	46 Keys

Conditional Access Interface

Item	Specification
PCMCIA	2 slots
	DVB Common Interface Standard

SPECIFICATIONS

A/V & Data In/Out

Item	Specification
TV-SCART	Video CVBS/S-VIDEO/RGB output
	Audio L/R output
VCR-SCART	Video CVBS output, Audio L/R output
	Video CVBS/S-VIDEO/RGB input bypass
	Audio L/R input bypass
S-VIDEO	Video S-VIDEO output
RCA A/V	Video CVBS output
	Audio L/R output
S/PDIF	Digital audio or Dolby AC-3 bitstream output
RS-232C	9 pin D-sub type
	Transfer rate 115.2Kbps
USB	USB2.0 Device

RF-Modulator

Item	Specification
RF-Connector	75W, IEC 169-2, Female/Male
Frequency	470 ~ 860MHz
Output Service	CH21 ~ 69
TV standard	PAL G/I/K selectable by Menu

Power Supply

Item	Specification
Input Voltage	90 ~ 250VAC, 50/60Hz
Type	SMPS
Power Consumption	Running: Max. 22W, Standby: 8W
Protection	Separate internal fuse.

Physical Specification

Item	Specification
Size(W x H x D)	340 x 60 x 265 mm
Weight(Net)	4.2Kg

* Specifications and functions may be changed for improvement without notice in advance.



Digital Television Receiver

WARRANTY INFORMATION
DO NOT RETURN THIS CARD TO TOPFIELD AUSTRALIA

EQUIPMENT DETAILS

MODEL	SERIAL NUMBER	DATE OF PURCHASE
TF5000PVRt		

IMPORTANT

PLEASE KEEP WARRANTY CARD, PROOF OF PURCHASE AND ALL MANUALS IN A SAFE PLACE AS YOU WILL REQUIRE THESE WHEN MAKING A WARRANTY CLAIM.

Ensure that the following conditions are followed when operating the equipment. Failure to do so may result in warranty being void.

Power requirements: Ensure main power supply is 240v AC +/- 10%, 40W Max, 50Hz +/- 5%.

- Do Not place the unit in a confined cabinet or cupboard with out proper ventilation.
- To prevent shock or hazard risk Do Not place Liquid or Fluids near the appliance.
- Do Not place appliance in a dusty or wet location.
- Full warranty conditions are listed on the rear of this card.
- Prior to making a claim you should read through the trouble shooting section in the manual and consult the Topfield Australia web site www.topfield-australia.com.au.

For further Warranty information or to make a claim please contact Topfield Australia on **1300 889 803**.

Note: 12 month warranty is offered by the Manufacturer Topfield Co.,Ltd. 4th Floor, Deuksan Bldg, 260-4, Seohyun-Dong, Bundang-Ku, Seongnam, 463-824, Korea.
Topfield Australia acts as the Service agent in Australia for the manufacturers warranty and can be contacted on 1300889803.

WARRANTY CONDITIONS

1. Where required by Topfield Australia only the original invoice/receipt issued by the dealer will be accepted as proof of purchase.
2. Topfield Australia may reject warranty claims on equipment which it believes to be illegally acquired or when the “owner” is unable to provide proof of purchase or where security labels or serial numbers have been tampered with or removed.
3. The warranty covers only defects in the material and workmanship of the product for a period of 12 months from the date of original purchase.
4. This warranty is on “Return to Base” basis. The owner is responsible for the delivery of the equipment to the point of purchase and for collecting the repaired or replaced equipment from the same location.
5. The warranty is void if failures arise as a result of any of the following. i) Abuse, misuse, physical impact, normal wear and tear. ii) Alteration or repairs carried out without written authorization from Topfield Australia. iii) Upgrade that are not registered by Topfield Australia. iv) Operating or maintained other than in accordance with the manual supplied.
6. This equipment will not be considered defective as a result of incompatibility with other equipment or accessories other than the ones supplied with the unit at the time of purchase.
7. This unit should be returned in its original carton and protective packaging or alternatively in a packing suitable to prevent damage. Topfield Australia will not accept any responsibility for goods damaged whilst the goods are in transit.
8. Repair or replacement under the terms of this warranty does not give the right to extension or a beginning of a new warranty period. Repairs or replacements may be carried out with functionally equivalent reconditioned parts or equivalent part. Parts that have been replaced become the property of Topfield Australia.
9. The customer acknowledges that no promise representation or undertaking has been given by Topfield Australia or its dealer in relation to equipment other than as contained in this warranty.
10. A service charge will apply if the fault is not covered within the conditions of this warranty or if there is no fault found. The charge will be based on the current market rate.
11. Topfield Australia is not liable for any other loss other than the unit itself.
12. Nothing contained in this warranty shall be read or applied so as to affect the right of the consumer in relation to the provisions of the trade practices act or other statutory rights provided by legislation of the state or territory. In the absence of applicable legislation this warranty will be purchases sole and exclusive remedy and neither Topfield Australia nor its distributors or agents shall be liable for any incidental or consequential damages for breach of any express or implied warranty of this equipment.